


User Guide

Air purifier

01. Specification

<NEAR VIEW>

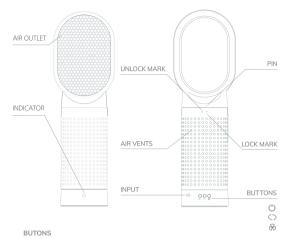

O Purifier on or off

Press On/Off button to turn the air purifier on or off.

() Oscillating

Press to oscillate the air purifier

Speed Adjustment

Press to change the speed mode. 2 Speed Levels: Quiet Mode - Powerful Mode

O2. What is in the box?



Air purifier & HEPA filter x 1



O3. Instructions for use

Buttons

Color	Function
Power On / Off button	Press to turn the air purifier on Press to turn the air purifier off
Oscillating	Press to oscillate the air purifier
Speed Adjustment	Press to change the speed mode 2 Speed Levels (Quiet Mode, Powerful Mode)

Power Indicator light

The indicator light alerts you to the Power status.

Color	Status
Continuously Blue	Connected

O4. How to replace filter

STEP 1. Rotate the head to the unlock mark



Pull out the head, joint plug and Replace filter





STEP 3. connect the joint plug

Aim the key to the unlock mark and rotate the head to the lock mark

O5. Satisfactory warranty

* 100% 12 months unconditional guarantee and 30 days Free-exchange;

730g

DC 5V

2W

ABS, Steel, Silicone Rubber

Dust (35), Powder (35)

3X108 PCS/om3 28 – 35db

+10 ~ +35°C

20 ~ 80% RH

-10 ~ 45°C

Pre-Filter, HEPA Filter, Carbon Filter

6 months on average in general environment. The air filter may need to be replaced sooner

or later depending on the air quality in area

2 Speed Levels (Quiet Mode, Powerful Mode)

- * You can find the replacement filter in our web-shop here: https://ecoquestpurifiers.com/
- * Please contact our support center through the web-shop or to below telephone number if you have any questions:

Tel: 1(213)423-0611

Size Weight

Material

Max Power

Noise Level

Filter Lifecycle

Air Speed Level

Air volume (CFM)

Operating Temperature

Operating Humidity

Storage Temperature

Cubic feet per minute (CADR)

Concentration of negative ions

Input

Filter

O6. Cautions

Please read this manual before using the device to ensure safe and

- 1. Do not directly expose the product to the rain and soak it in water.
- 2. Please keep away from fire, high temperature environment. Do not use on or near household appliances such as a TV or heater.
- 3. Keep the cord away from sharp edges of tables, counters and hot
- 4. Do not clean this unit with chlorine-based or acidic detergents.
- 5. Use only Manufacturer-approved accessories.