

ECOZONE AIR PURIFIER

USER'S MANUAL



CAUTION: Please read manual carefully for proper procedures and operation

Congratulations!

You have purchased one of the most effective, technologically advanced and modern air purifiers available on the market today. Your new EcoZone Air Purifier is designed to provide years of trouble-free, low maintenance operation. Be sure to read and follow all service procedures outlined in this owner's manual, and use only genuine EcoHitek replacement parts. If you have any questions concerning this, or any other EcoHitek product, please contact your distributor. Enjoy your new EcoZone!

APPLICATIONS:

- Bathroom
- Storage
- Garage
- Loft
- Basement
- Attic
- Laundry room

BENEFITS:

1. Freshens Air
2. Removes Odors (both organic and chemical)
3. Kills Mildew, Bacteria, Viruses

OVERVIEW:

1. No Sprays or Air Fresheners
2. Chemical Free Operation

TECHNOLOGIES:

- Ionization – latest carbon brush head technology
- ActiveOx (Adjustable Active Oxygen Generation)

FEATURES:

1. Compact and Portable
2. Low Maintenance
3. Very Quiet Operation
4. Easy to Use

SPECIFICATIONS:

Model: EcoZone

Voltage Rating: AC 100V-240V, 50/60Hz

Energy Consumption: 7 watts

Size: 4.4 x 4.4 x 1.8 inches / 11 x 11 x 4.5 cm

Weight: 8 oz. / 219 grams

Ion Output: 8 million/cm³

Active Oxygen Output: 0 - 100mg/h (Adjustable)

Recommended Room Size: up to 323ft² / 30m²

CAUTION

- To prevent electric shock, do not plug or unplug unit with wet hands.
- Do not disassemble or insert items into unit, doing so, may cause damage or electric shock.

INSTALLATION

1. Unpack product from its packing. Inspect the unit for any visible signs of damage. If damage is evident, repack and contact your distributor.
2. Plug the unit into power outlet and turn the central knob clockwise - you will hear a click and blue light will illuminate. Both ActiveOx (Adjustable Active Oxygen Generation) and Ionizer are now working.

OPERATION

1. Your EcoZone Air Purifier can work 24 hours per day and 7 days a week non-stop. Rotate the knob to adjust the Active Oxygen output to a comfortable level from 0-100mg/h.

Attention:

- If you feel that odor of Activated Oxygen is too strong for you turn it down to your own comfortable level.
 - If you need to get rid of odors or any other air problem quick turn central knob on the front of the unit all the way up to 100 and leave the room if the Active Oxygen Odor is too strong. (same for animals)
2. To turn the unit off rotate the knob counter clockwise until you hear a click.

MAINTENANCE

EcoZone Air Purifier is very low maintenance. There is never a need to take your unit apart and you only need to vacuum the air inlet and outlet of the unit once a month. Disconnect the unit before cleaning and gently brush back and forth over the openings to help remove dust. Do not blow air into the unit.

DISPOSAL

Do not dispose this product in regular household trash. Please dispose at a location designated for this purpose.

ONE (1) YEAR LIMITED WARRANTY

Your EcoZone Air Purifier comes with 1(one) year warranty. Please find the warranty certificate inside the packing box of your purifier. You may look up your warranty status by entering your warranty certificate number or your unit's serial number on SUPPORT page of our web site www.ecohitek.com/support
For warranty service, please contact your distributor or EcoHitek customer service at www.ecohitek.com

WHAT IS COVERED BY THIS WARRANTY

We warrant the EcoZone Air Purifier to the consumer, subject to the requirements below, against defects in workmanship or material, provided that the products are returned to a service location within twelve (12) months of date of purchase.

INSTALLATION AND MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper installation, use and maintenance in accordance with the User's Manual. Failure to meet any of these requirements will void this warranty. Servicing of your EcoZone Air Purifier by parties other than our authorized representative and/or using parts other than genuine parts will also void this warranty.

HOW TO OBTAIN WARRANTY SERVICE

Customer must contact distributor or EcoHitek customer service and provide warranty certificate number or serial number of the unit within warranty period. We will repair or replace and return the product, if its examination shall disclose any part to be defective in workmanship or material. If we, in our discretion, are unable to repair the product after a reasonable number of attempts, we will provide a replacement unit.

WHAT IS NOT COVERED BY THIS WARRANTY

This product is intended for household use only. Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply to loss or damage caused by accident, fire, abuse, misuse, improper installation, modification, misapplication, commercial use, or by any repairs other than those provided by our authorized Service Center. This warranty does not cover any water damage.

MISSING SERIAL NUMBERS

If a valid serial number is missing from the product, the warranty will be voided.

EXCLUSION OF OTHER WARRANTIES & CONDITIONS

Except as provided herein, we make no representation or warranty of any kind, all other warranties of any kind, express or implied, are hereby expressly disclaimed, including any implied warranty of merchantability or fitness for a particular purpose.

LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES

We shall not in any case be liable for special, incidental or consequential damages arising from breach of expressed or implied warranties, conditions, guarantees or representations, breach of contract, negligence or any other legal theory. Such excluded damages include, but are not limited to, loss of profits or revenue, and loss of the use of the products, and any loss caused by leaks or other water damage.

All rights reserved © 2014 EcoHitek International